

AC Main Power Distribution Panels

PN 8074 / PN 3074 / PN 8174 / PN 3174
PN 8409 / PN 3409 / PN 8509 / PN 3509

Panel Specifications

Voltage Rating: PN 8074 / 3074 / 8409 / 3409 120 Volts AC
PN 8174 / 3174 / 8509 / 3509 230 Volts AC
Panels are rated for these voltages and are so marked in order to comply with ABYC standards.

Amperage Rating: Panel Buses are sized for 100 Amperes of continuous current.

Material: 0.125" 5052-H32 Aluminum Alloy

Primary Finish: Chemical Treatment per Mil Spec C-5541C

Final Panel Finish: Graphite color 2 part textured Polyurethane

Overall	Inches	Millimeters	PN
Dimensions:	5.25" x 11.25"	133.4mm x 285.8mm	8074/3074/8174/3174
	5.25" x 7.50"	133.4mm x 190.5mm	8409/3409/8509/3509
Mounting	4.42" x 10.42"	112.3mm x 264.7mm	8074/3074/8174/3174
Centers:	4.44" x 6.69"	112.8mm x 169.9mm	8409/3409/8509/3509

Panel Features

PN 8074/PN 3074/PN 8174/PN 3174/PN 8409/PN 3409/PN 8509/PN 3509

- **CE** marked, Complies with European Standards
- 0-50 Ampere AC Ammeter

PN 8074 / PN 3074 / PN 8409 / PN 3409 - 120 Volt AC

- One double-pole 30 Ampere AC main circuit breaker
- PN 8074 / PN 3074 - five 15 Ampere branch circuit breakers installed
- PN 8409 / PN 3409 - three 15 Ampere branch circuit breakers installed
- 0-150 Volt AC voltmeter

PN 8174 / PN 3174 / PN 8509 / PN 3509 - 230 Volt AC

- One double-pole 16 Ampere AC main circuit breaker
- PN 8174 / PN 3174 - five 8 Ampere branch circuit breakers installed
- PN 8509 / PN 3509 - three 8 Ampere branch circuit breakers installed
- 0-250 Volt AC voltmeter



WARNING

- ✓ It is not possible within the scope of these instructions to fully acquaint the installer with all the knowledge of electrical systems that may be necessary to correctly install this product. If the installer is not knowledgeable in electrical systems we strongly recommend that an electrical professional be retained to make the installation.
- ✓ If either the panel front or back is to be exposed to water it must be protected with a waterproof shield.
- ✓ The panels must not be installed in explosive environments such as gasoline engine rooms or battery compartments as the circuit breakers are not ignition proof.
- ✓ The vessel's shore power cord must be disconnected from shoreside power before installing this electrical panel.
- ✓ If an inverter is installed on the vessel its power leads must be disconnected at the battery before the panel installation. Be aware that many inverters have a "sleep mode" in which their voltage potential may not be detectable with measuring equipment.
- ✓ If an AC Generator is installed aboard it must be stopped and rendered inoperable before the panel is installed.
- ✓ Verify that no other AC source is connected to the vessels' wiring before the panel is installed.

Guarantee

Any Blue Sea Systems' product with which a customer is not satisfied may be returned for a refund or replacement at any time.

Blue Sea Systems Inc.
425 Sequoia Drive
Bellingham, WA 98226 USA

Phone (360) 738-8230
Fax (360) 734-4195
E-mail conductor@blueseas.com
www.blueseas.com

Document 9976 Rev.F

Installation

1. Disconnect all AC and DC power

Disconnect all AC power originating on or off the vessel. This includes inverters, generators, shore power attachments and any other device capable of supplying AC power to the ship's circuits.

Disconnect the main positive DC cable from all batteries to eliminate the possibility of a short circuit and to disable the inverter while installing the distribution panel.

2. Select mounting location and cut opening

If this panel is to serve as your main shore power disconnect circuit breaker, select a location which is not more than 10 feet from the shore power inlet or the electrical attachment point of a permanently installed shore power cord as measured along the conductors of the feed wires. If it is more than 10 feet additional fuses or circuit breakers must be installed within 10 feet of the shore power inlet.

Select a mounting location which is protected from water on the panel front and back and is not in an area where flammable vapors from propane, gasoline or lead acid batteries accumulate. The circuit breakers used in marine electrical panels are not ignition protected and may ignite such vapors.

Using the panel template provided, make a cut out in the mounting surface where the distribution panel is to be mounted. Do not yet fasten the panel to the mounting surface.

3. Install branch circuit wires

Determine the proper wire size for each branch circuit using the chart below. Verify that the standard circuit breakers installed in the panel are correct for each branch circuit. Remove and replace any that are incorrectly sized. The circuit breaker must have a rating less than the allowable amperage of the wire, yet greater than the circuit's continuous current.

Connect each branch circuit hot (black) to the appropriate load terminal. Connect each branch circuit neutral (white) to one of the screws on the neutral bus. Connect each branch safety ground wire (green) to one of the screws of the safety ground bus.

Do not confuse the neutral current carrying wires (sometimes called ground) with the green normally non-current carrying wires (sometimes called grounding). These two wires must be connected only at the source of power, nowhere else.

Wire sizing chart

Use the wire sizing chart below to determine the proper branch and feed circuit wire sizes.

Allowable Amperage of Conductors

Wire Size (AWG)	Outside Engine Spaces	Inside Engine Spaces
16	25.0	21.3
14	35.0	29.8
12	45.0	38.3
10	60.0	51.0
8	80.0	68.0
6	120.0	102.0
4	160.0	136.0
2	210.0	178.5

Note: This chart assumes wire with 105°C insulation rating and no more than 2 conductors are bundled. Not suitable for sizing flexible shore power cords.

Installation (continued)

4. Install feed circuit wires

Install the feed wires from the shore power inlet or other AC source, referring to the wire sizing chart to select the correct wire size. Connect the black AC hot, white AC neutral and green AC safety ground as shown in the illustration.

If the feed wires are from the shore power inlet or the electrical attachment point of a permanently installed shore power cord and the inlet or attachment point is more than 10 feet from this panel, an additional fuses or circuit breakers must be installed within 10 feet of the shore power inlet. The measurement is made along the conductors.

5. Installation of Backlight System

The backlight board is a DC device. When installing it in an AC panel both wire leads must be connected to an appropriate DC source and ground.

Connect the yellow negative wire to a DC ground. Connect the red positive wire to any DC positive supply, usually a switch that controls the vessel's other nighttime illumination.

6. Apply branch circuit labels and mount panel

Remove the blank labels installed in the panel before installing your branch circuit labels. Apply a label for each of the branch circuits from the 30 basic labels provided. If the appropriate label is not included, individual labels are available from Blue Sea Systems for specific applications. Refer to the label order form for a complete listing of individual labels.

Fasten the panel to the mounting surface using the panel mounting screws supplied with the panel.

7. Testing

✓ Connect the vessel's shore power and verify the Reverse Polarity light is not illuminated. If the red Reverse Polarity light is on then either the hot and ground or the hot and neutral wires have been crossed. Starting at the panel, trace the connections back as far as necessary to locate the error.

✓ Using a multimeter where the power source is connected to the panel verify:

PN 8074 / PN 3074 / PN 8409 / PN 3409 - 120 Volt AC

- 120 volts between hot and neutral (nominal, this may vary depending on source voltage)
- 120 volts between hot and ground.
- 0 volts between neutral and ground.

PN 8174 / PN 3174 / PN 8509 / PN 3509 - 230 Volt AC

- 230 volts between hot and neutral (nominal, this may vary depending on source voltage)
- 230 volts between hot and ground.
- 0 volts between neutral and ground.

✓ Turn on each branch circuit to verify power to each circuit.

Optional Branch LED's

This Panel is supplied with LED's pre-installed in all optional branch positions. For future expansion of the panel remove the hot leg of the LED from the AC Neutral Bus and connect it to the Load side of the branch circuit breaker.

Note

All Blue Sea Systems' electrical distribution panels are furnished with 15 amp or 8 amp circuit breakers for branch circuits. 15 amp circuit breakers are used in all 120 volt panels and 8 amp circuit breakers are used in all 230 volt panels. These ratings were selected to minimize the need for removing the panel's circuit breakers and reinstalling different size circuit breakers. It is very rare to have more than this amount of current flowing in any one circuit. Therefore, these circuit breakers will satisfy the vast majority of marine circuit protection situations.

The Purpose of a Panel

There are six purposes of a marine electrical panel:

- Power distribution
- Circuit (wire) protection
- Circuit ON/OFF switching
- Reverse Polarity Indication
- Metering of voltage and amperage (In panels with meters)
- Condition Indication (circuit energized)

Applicable Standards

- American Boat and Yacht Council Standards and recommended Practices for Small Crafts sections: E-8, Alternating Current Electrical Systems on Boats.
- United States Coast Guard Code of Federal Regulations 33, Part 183, Subpart I, Electrical Systems on Boats.


Related Products from Blue Sea Systems

- PanelBack Insulating Covers
- High Amperage Fuses and Circuit Breakers for positive feed wires
- High Amperage Battery Switches
- Terminal Blocks and Common Bus Connectors
- AC Distribution Panels
- DC Distribution Panels
- AC and DC Digital and Analog Voltmeters and Ammeters

Useful Reference Books

Calder, Nigel, 1996: *Boatowner's Mechanical and Electrical Manual*, 2nd edition, Blue Ridge Summit, PA: TAB Books, Inc.

Wing, Charlie, 1993: *Boatowner's Illustrated Handbook of Wiring*, Blue Ridge Summit, PA: TAB Books, Inc.

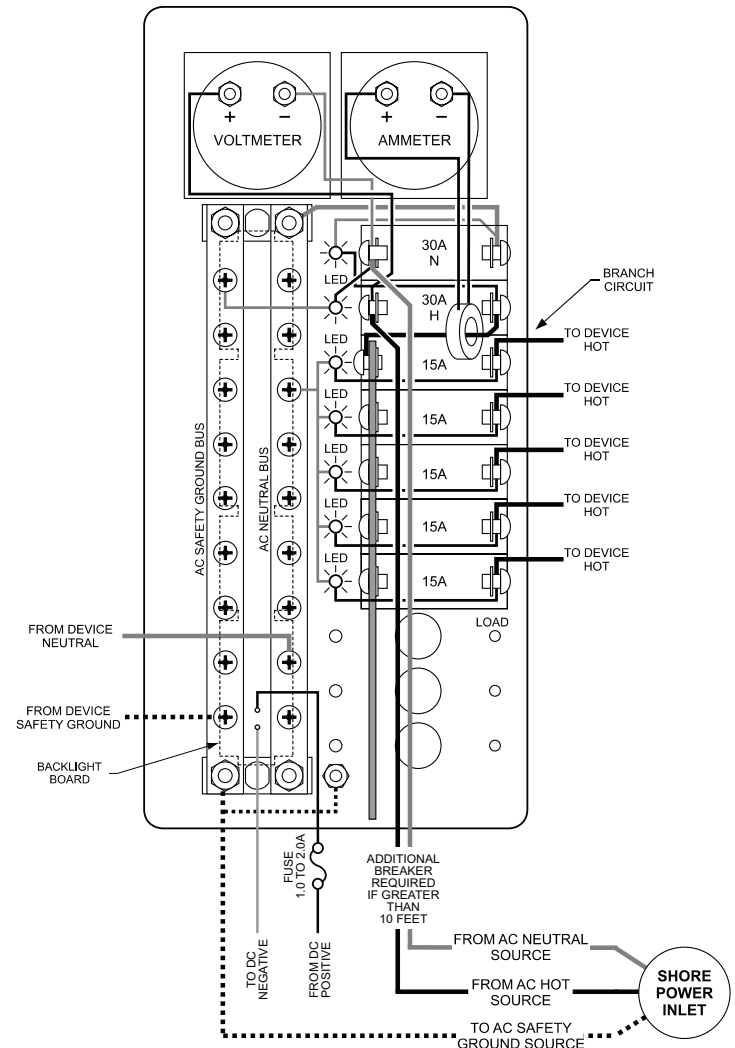

Wiring Diagram

AC Power Distribution Panel with Voltmeter and Ammeter
PN 8074 / PN 3074 shown for reference